


# 4 Foot Silhouette Park Bench w/ Arms

For Fastener Pack  
(FP-SB4BA-CU-02)

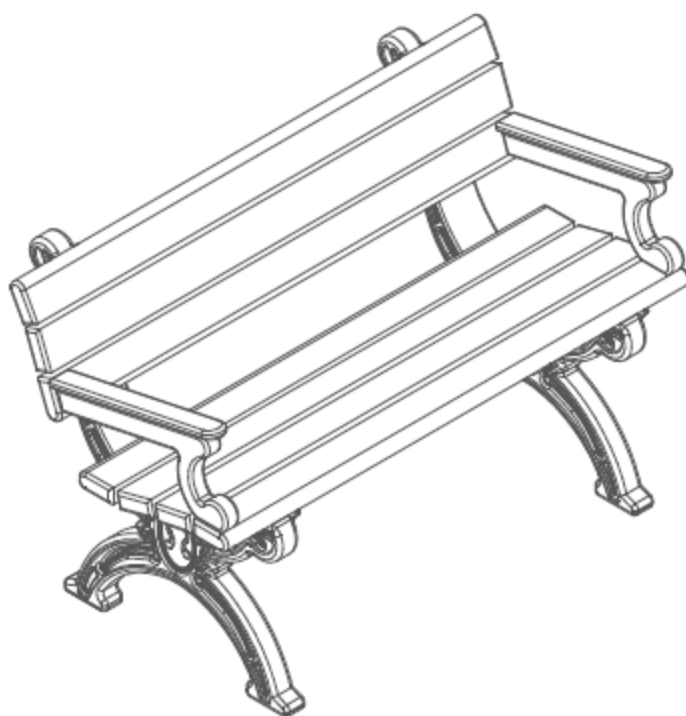

Congratulations ! !

You have just purchased the finest recycled plastic  
park bench available. Enjoy ! ! !

Before assembly, please make sure all components are included.




(1) - One Fastener Pack  
FP-SB4BA-CU-02

FP - Fastener Pack




(10) - bench arm

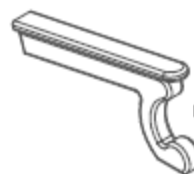


(10) - bench arm

(2) - Two Bench Ends  
BSA-CBA-01

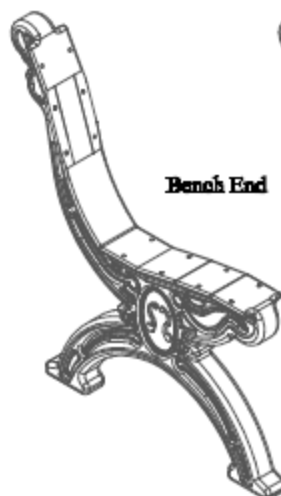

Bench End

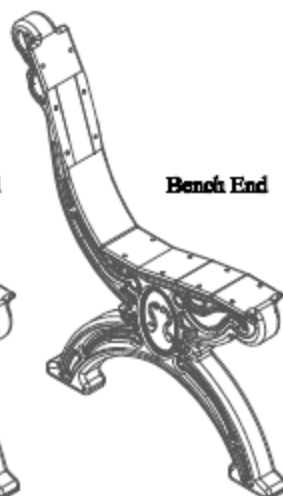

Bench End

(2) - Two Bench Ends  
PS-CBBE-S-01

• •	A - Bench Board	• •
• •	A - Bench Board	• •
• •	A - Bench Board	• •

(3) - Three Bench Boards  
BP-SB4B-A-01

• •	B - Bull-nosed Bench Board	• •
• •	B - Bull-nosed Bench Board	• •

(2) - Two Bull-nosed Bench Boards  
BP-CB4B-A-01

• • •	C - Bull-nosed Bench Board w/ arm holes	• • •
• • •	C - Bull-nosed Bench Board w/ arm holes	• • •


(2) - Two Bull-nosed Bench Boards w/ arm holes  
HP-CB4BA-A-01

Before assembly, please make sure all fasteners are included.

28- #12 x 1 1/2" Pan Head Phillips Screw



4- 1/4" x3" Hex Head Lag Bolt



4- 1/4" Flat Washer





Also needed for this assembly will be the following materials:

1 - #3 Phillips Drive Bit

1 - 7/16" Socket Wrench

**Fig #1:**

In order to make the assembly of this Silhouette Bench easier while going through the assembly process the board positions are numbered and will be referenced in later steps.

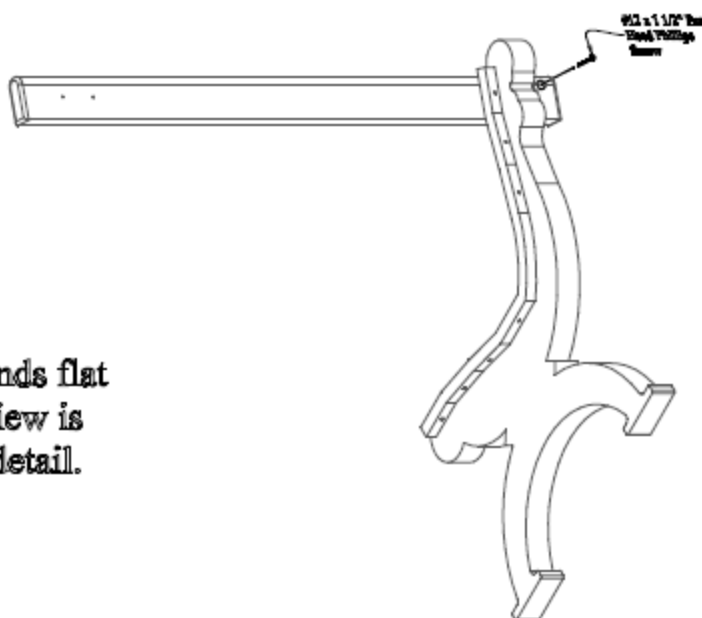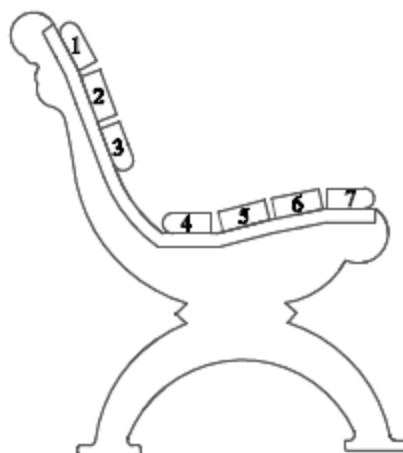


**Note:**

Stand bench ends flat on ground. View is only to show detail.

**Step #1:**

Stand (1) One bench end upright and place (1) One bull-nosed bench board (B) on position 1 being sure to align the pilot holes to the pre-drilled holes in the bench end. After the holes are properly aligned, fasten with (1) One #12 x 1 1/2" Pan Head Phillips Screw in the pre-drilled hole on the right side of the bench end.

**Note:** Do not tighten screw completely. This will be done in a later step.

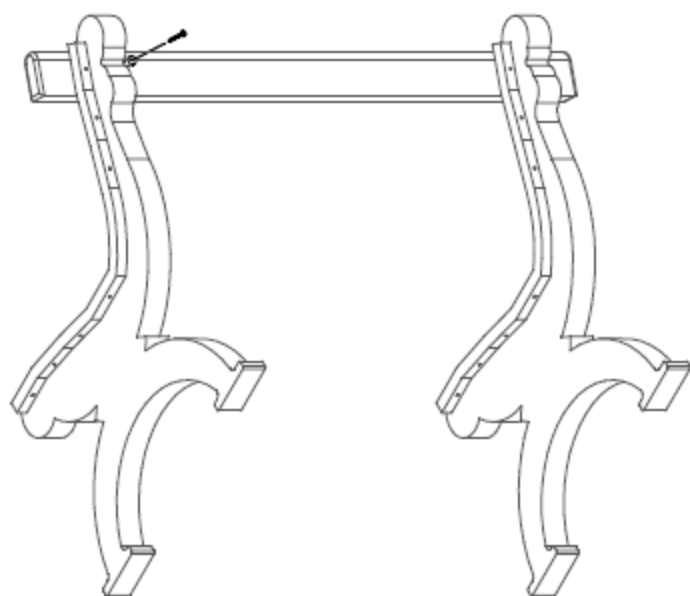

**Step #2:**


Stand the other bench end upright, and place the bull-nosed bench board (B) already attached to the first bench end, on position 1 being sure to align the pilot holes with the pre-drilled holes in the bench end. After the holes are properly aligned, fasten with (1) One #12 x 1 1/2" Pan Head Phillips Screw in the pre-drilled hole on the right side of the bench end.

**Note:** Do not tighten screws completely. This will be done in a later step.

**Step #3:**


Align the pilot holes on the bull-nosed bench board (B) to the pre-drilled holes on the left side of the bench ends. After the holes are properly aligned, fasten with (1) One #12 x 1 1/2" Pan Head Phillips Screw per bench end.

**Note:** Be sure to tighten screws completely after this step.

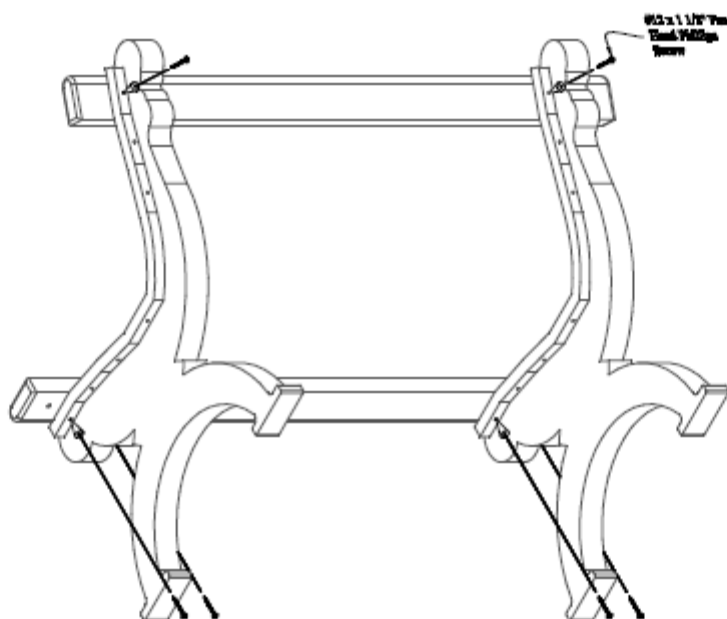


**Step #4:**

Place a second bull-nosed bench board w/ arm holes (c) on position 7. Repeat Steps 1 - 3 to attach. Use (1) One #12 x 1 1/2" Pan Head Phillips Screw per hole to fasten.

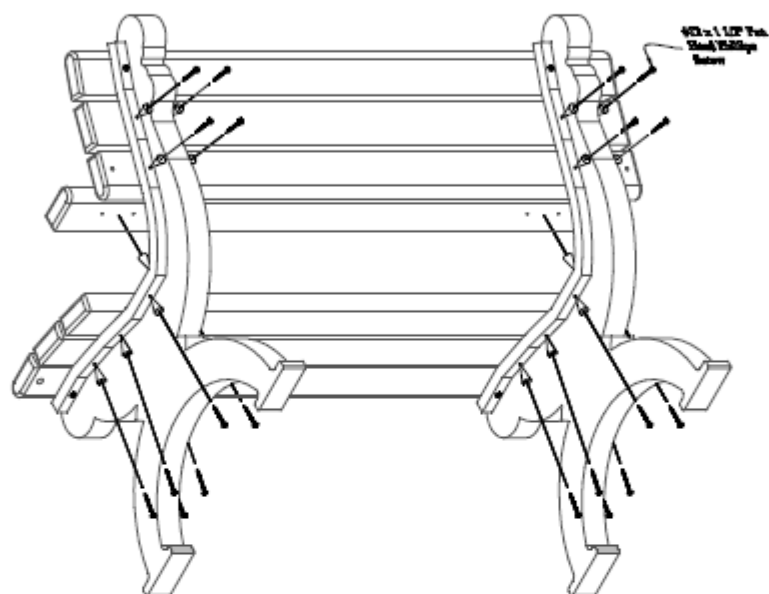

**Step #5:**

Repeat Steps 1 - 3 to attach bench boards (A) on positions 2, 5 & 6. Place bull-nosed bench boards w/arm holes (C) on position 3 and a bull-nosed bench board (B) on position 4. Use (1) One #12 x 1 1/2" Pan Head Phillips Screw per hole to fasten.

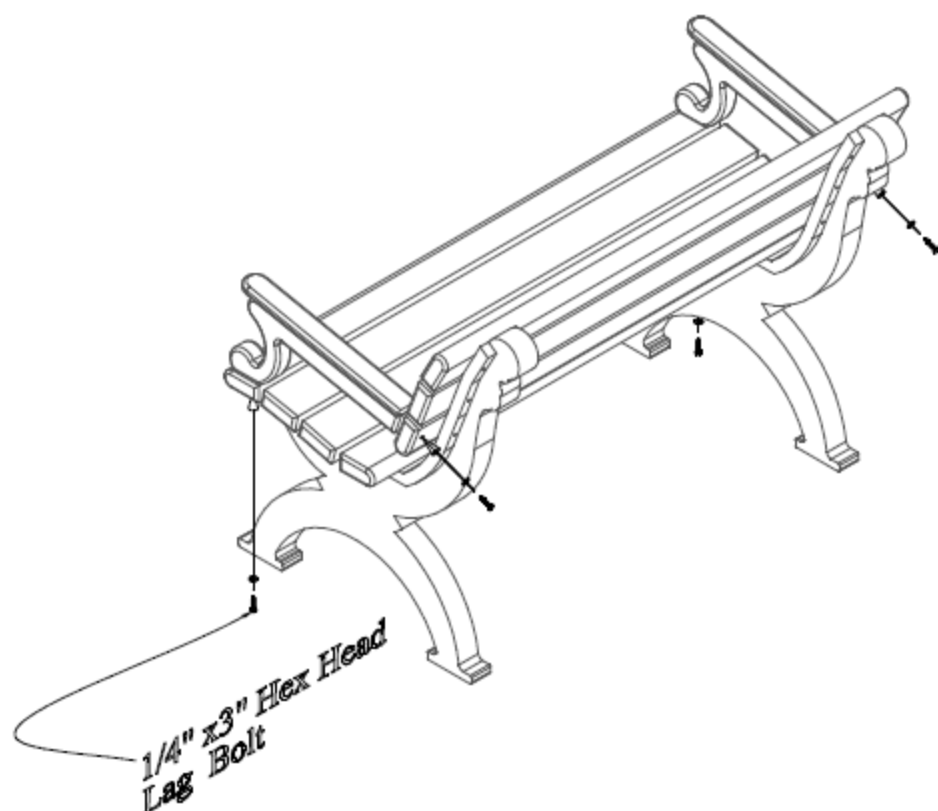

**Step #6:**

Align the pilot holes on the Arm to the pre-drilled holes on the bullnose bench boards w/ arm holes (C). After the holes are properly aligned, fasten with (1) One 1/4" Flat Washer and 1/4" x 3" Hex Head Lag Bolt per hole to fasten.