



FS-LB8F-CAP-02

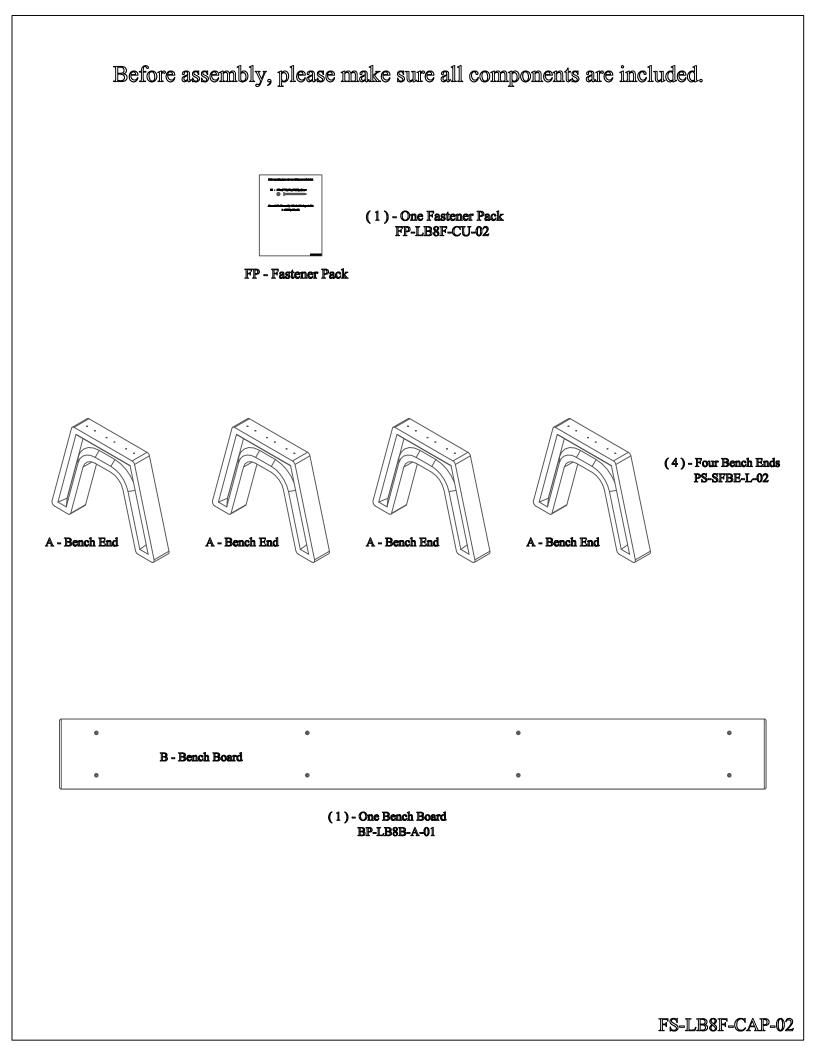


Before assembly, please make sure all fasteners are included.

8 - #12 x 3" Flat Head Phillips Screw



Also needed for this assembly will be the following materials:


1 - #3 Phillips Drive Bit

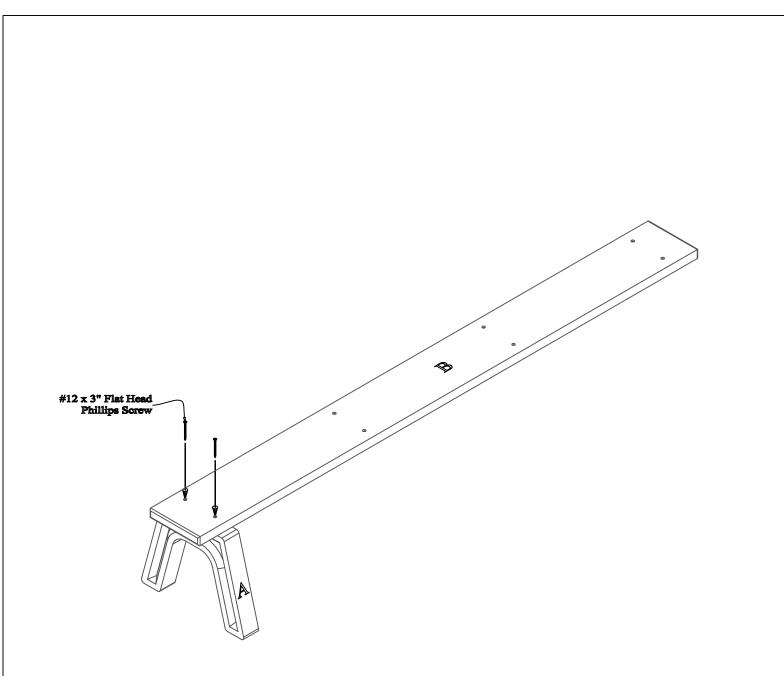

Step #1:

Place (1) One Bench End in position as shown above being sure to align the pilot holes to the pre-drilled holes in the bench board. After the holes are properly aligned, fasten with (1) One $#12 \times 3''$ Flat Head Phillips Screw per hole to secure.

Note: Do not tighten screw completely. This will be done in a later step.

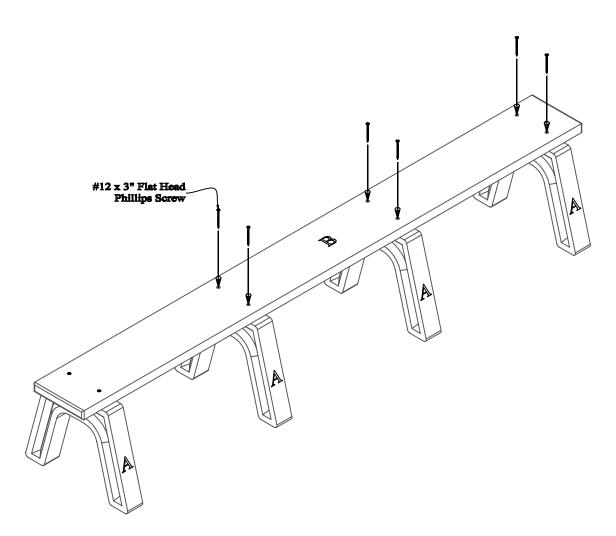

Step #2:

Repeat step #1 for the remaining (3) Three Bench Ends in the positions shown above being sure to align the pilot holes to the pre-drilled holes in the bench boards. After the holes are properly aligned, fasten with (1) One $#12 \times 3^{"}$ Flat Head Phillips Screw per hole to secure.

Note: Be sure to tighten all screw completely after this step.