

# Optional Bench Arm Assembly Instructions




D - Bench Arm



D - Bench Arm

( 2 ) - Two Bench Arms  
BSA-PCBA-A-00

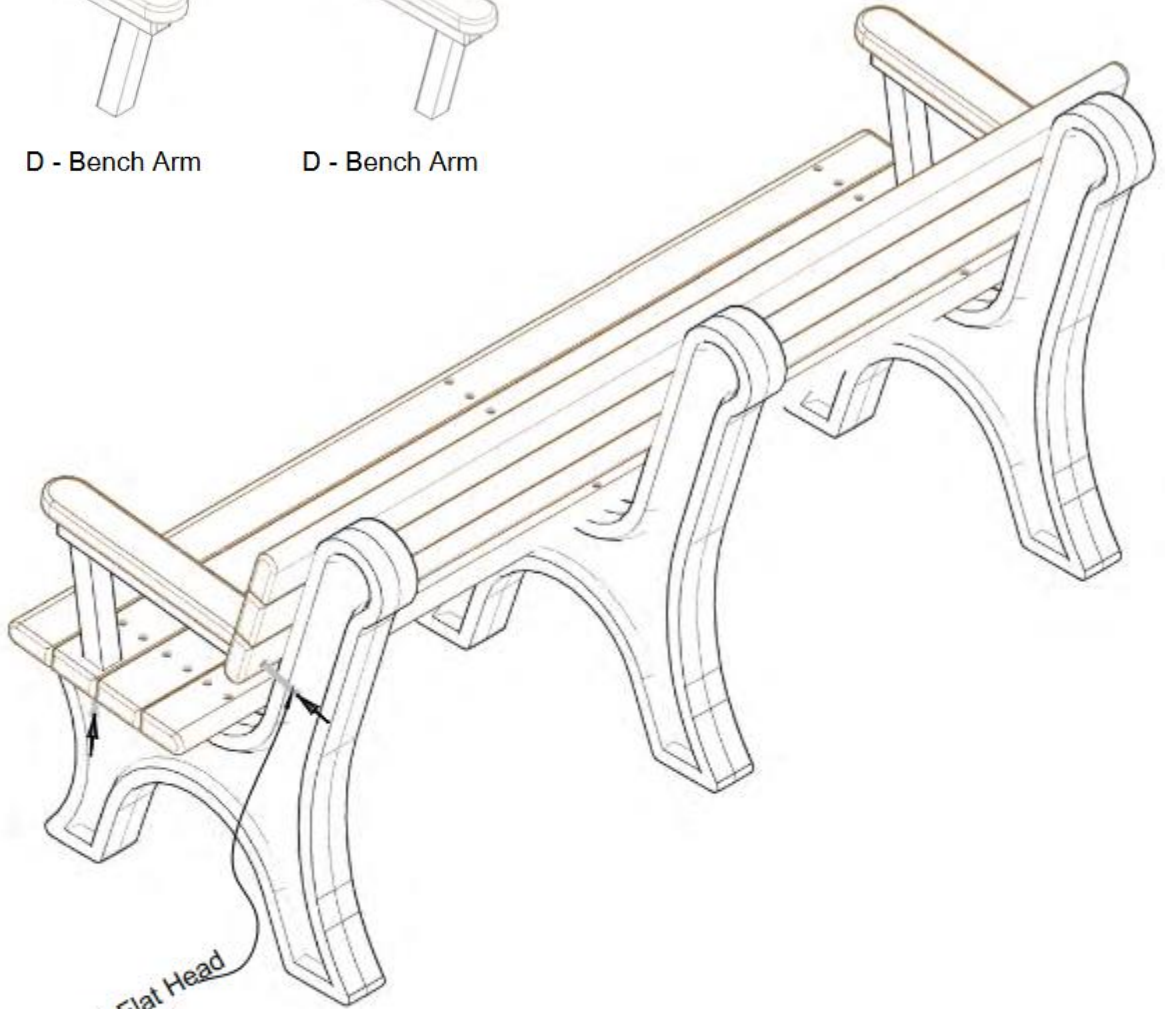

#12 x 3" Flat Head  
Phillips Screw

Position the bench arms (Part D) as shown above. Align the pilot holes to the pre-drilled holes in the bench board w/ arm holes. After the holes are properly aligned, fasten with (1) One #12 x 3" Flat Head Phillips Screw per hole.