


Installation Instructions

Estimated Required Concrete: 4 - 50lb Bags of Concrete Mix

Attach footer to post using specificed hardware. Set footer & post in hole and pour concrete. Attach receptacle and sanitizer enclosure to post using specified hardware. Insert shelf and sanitizer bottle into sanitizer enclosure. Apply decal to front lid of enclosure

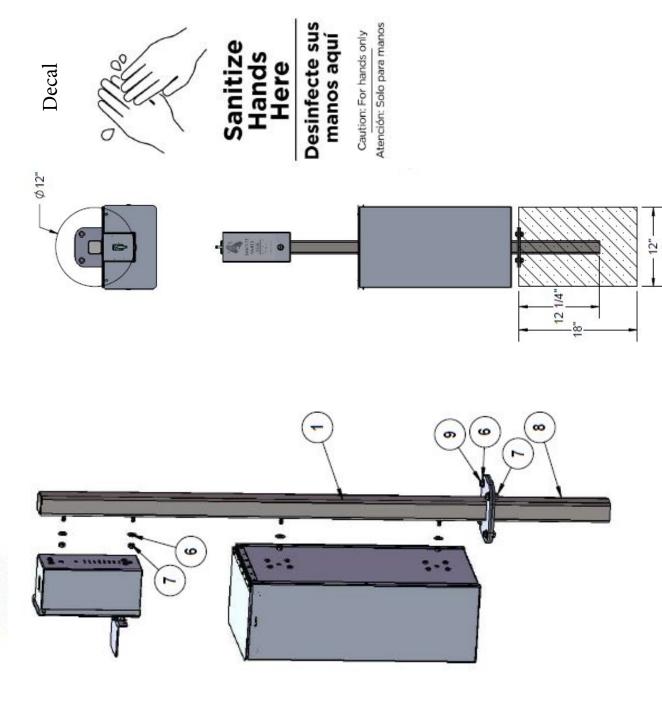

3

子

Page 2 of 2 OCC Outdoors Products PH: 1-800-821-7670 EMAIL - occcontact@occoutdoors.com Fax: 1-317-862-9422 Part #: OCC-1000S

В