


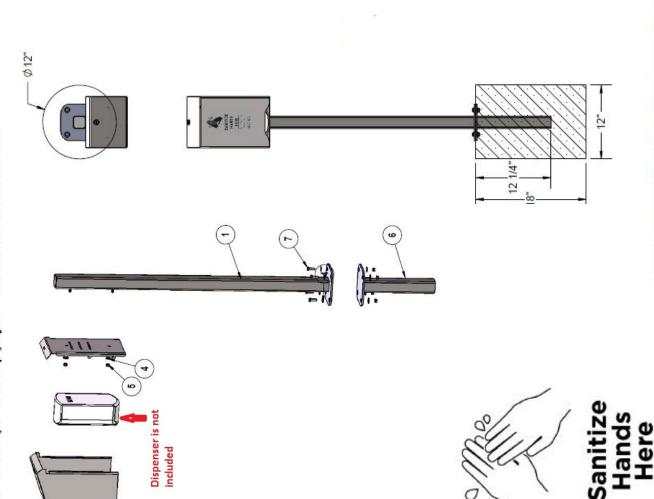

D

Attach footer to post using specificed hardware. Set footer & post specified hardware. Attach dispenser to back plate and attach Attach enclosure to post using cover to back plate. Apply decal to front cover. in hole and pour concrete.



仐

5

Decal

Estimated Required Concrete: 4 - 50lb Bags of Concrete Mix

Desinfecte sus

manos aquí

Atención: Solo para manos Caution: For hands only

Page 2 of 2 OCC Outdoors Products PH: 1-800-821-7670 EMAIL - occcontact@occoutdoors.com Fax: 1-317-862-9422 Part #: OCC-1004S

В

D